

# Internal Wastegate - Boost Control Valve Setup

VIPEC V44 and V88 ECU Models

## Air Conections

- Port 1 From T Piece
- Port 2 Vent (To atmosphere)
- Port 3 Blank

Mount T piece in line from Manifold (Boost pressure feed) and Wastegate actuator.

Both T piece and adjustable restrictor should be mounted reasonably close to wastegate actuator

If using the VIPEC small boost valve a fixed restrictor of 0.8 to 1mm will be a good starting point.

Select AUX 8 in software and set to 10Hz. Connect boost valve to pin A26 and +12 from ignition switch

